

# Cylinder Mounting Instructions

Copyright © 2014 by SUSPA® Incorporated

To ensure proper seal lubrication, SUSPA® recommends that the gas spring be mounted in a rod down / tube up orientation. Failure to mount the gas spring in this orientation can reduce cylinder life or cause premature pressure loss. For questions or concerns regarding gas spring mounting, please contact SUSPA® for application assistance.

